

1. Q: How to disable the integrated VGA on FM2 motherboard?

A: Please enter BIOS\Advanced\North Bridge Configuration page, adjust [Share Memory] option to Auto, and disable [Dual Graphics] option.

3. Q: How could I use Wake On LAN function under Ubuntu (Kernal version 3.2.0-23) on Vision 3D series?

- A: Please follow below steps to use WOL function.
 - 1. Please enable "Onboard LAN power on" in BIOS\Advanced\ACPI configuration.
 - 2. Connect LAN cable.
 - 3. Search terminal in Dash Home and open it.



4. Please install ethtool to enable WOL by following command. (Refer the picture)

#sudo apt-get update

#sudo apt-get install ethtool

#sudo ethtool -s eth0 wol g

#sudo reboot

```
asrack@asrack.desktop:-5 sudo apt-get update
[sudo] password for asrack:
Ign http://us.archive.ubuntu.com precise InRelease
Ign http://us.archive.ubuntu.com precise-backports InRelease
Ign http://us.archive.ubuntu.com precise-backports InRelease
Hit http://us.archive.ubuntu.com precise-backports InRelease
Hit http://us.archive.ubuntu.com precise-security InRelease
Hit http://us.archive.ubuntu.com precise-security InRelease
Ign http://us.archive.ubuntu.com precise-backports Release.gpg
Ign http://security.ubuntu.com precise-backports Release.gpg
Hit http://us.archive.ubuntu.com precise-security Release.gpg
Hit http://us.archive.ubuntu.com precise-security Release
Hit http://us.archive.ubuntu.com precise-security Release
Hit http://us.archive.ubuntu.com precise-security/main Sources
Hit http://us.archive.ubuntu.com precise-security/main Sources
Hit http://us.archive.ubuntu.com precise-backports Release
Hit http://us.archive.ubuntu.com precise/main Sources
Hit http://us.archive.ubuntu.com precise-security/main-la86 Packages
Hit http://security.ubuntu.com precise-security/main-la86 Packages
Hit http://se.archive.ubuntu
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    asrock@asrock-desktop:~$ sudo apt-get update
| It http://www.archive.ubuntu.com precise-updates/universe TranslationIndex | It http://www.archive.ubuntu.com precise-backports/particled sources | It http://www.archive.ubuntu.com precise-backports/particled sources | It http://www.archive.ubuntu.com precise-backports/particled sources | It http://www.archive.ubuntu.com precise-backports/particled franslation | It http://www.archive.ubuntu.com precise/particled franslation | It http://www.archive.ubuntu.com precise-backports/particled franslat
                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          23 1 40 3:28 AM 1 asrock €
                                                          setting up ethtool (s:3.1-1) ...

asrock@asrock-desktop:-$ sudo ethtool -s eth8 wot $ asrock@asrock-desktop:-$ sudo reboot asrock@asrock-desktop:-$ sudo reboot
```

5. Now, the system is ready to be woken up through LAN by other computers.